


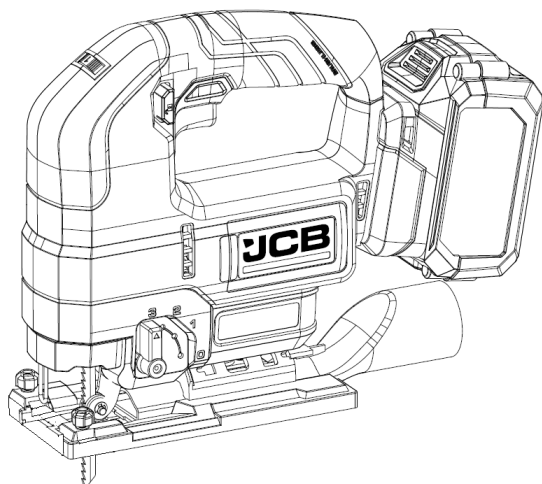

JCB-18BPJS-DG

Original
Instructions

IM-18BPJS-DG-EN
Iss: 06/2026

GENERAL WARNINGS & DISPOSAL



To reduce the risk of injury, the user must read the instruction manual.



This symbol is used throughout this manual to warn the user about potential risks. Please read & understand these sections before using the device.



Personal Protective Equipment (P.P.E.), such as ear defenders, eye protection, safety gloves and a dust mask, must be worn during the operation of the device.



The device must not be exposed to rain or immersed in water.



Do not allow any part of the device to come into contact with flames, or to catch fire.



Do not expose battery pack or tool to fire or excessive temperatures.



Do not dispose of batteries in household waste. Return exhausted batteries to a local collection or recycling point.



This product has been marked with a symbol relating to removing electric and electronic waste. The product should not be discarded with household waste but must be returned to a collection system which conforms to the EU Directive 2012/19/EU or the UK Waste Electrical and Electronic Equipment Regulations 2013. It will then be recycled or dismantled in order to reduce the impact on the environment. Electric and electronic equipment can be hazardous for the environment and for human health since they contain hazardous substances.

The month and year of manufacture can be found within the product serial number e.g. MMYYPXXXXXXX. Where production month (MM) and production year (YY) are included. JCB-18BPJS-DG Designation of the tool: 18 - 18Vdc, JS - Jigsaw

Contents

GENERAL POWER TOOL SAFETY WARNINGS	4
1. Work area safety	4
2. Electrical safety	4
3. Personal safety	4
4. Power tool use and care	5
5. Battery tool use and care	5
6. Service	6
TOOL SPECIFIC SAFETY WARNINGS	7-8
CHARGER SAFETY	9
COMPONENT LIST	10
TOOL TECHNICAL DATA	11
BATTERY TECHNICAL DATA	11
CHARGER TECHNICAL DATA	11
NOISE INFORMATION	11
VIBRATION INFORMATION	12
OPERATING INSTRUCTIONS	13
Intended Use	13
Battery Operation & Use	13
Accessory Information	14-16
Maintenance & Storage	16
Warranty	17
Declaration of Conformity	18



GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

Read all safety warnings, instructions and specifications provided with this power tool.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

1. Work area safety

- **Keep work area clean and well lit.**
Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- **Keep children and bystanders away while operating a power tool.**
Distractions can cause you to lose control.

2. Electrical safety

Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

3. Personal safety

Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

Use personal protective equipment.

Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

4. Power tool use and care

Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

5. Battery tool use and care

When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.



Do not use a battery pack or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, an explosion or risk of injury.

Do not expose a battery pack or tool to fire or excessive temperature. Exposure to fire or temperature above 130 °C may cause explosion.

Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

In Case of Fire or Thermal Runaway, follow these steps:

1. If the battery catches fire or shows signs of thermal runaway (e.g. swelling, smoke, hissing, or intense heat):
2. Evacuate the Area Immediately – Ensure personal safety first. Move away from the battery.
3. Do Not Attempt to Extinguish with Water – Use a Class D fire extinguisher or dry sand if available.
4. Call Emergency Services – Contact your local fire department and inform them it is a lithium battery fire.
5. Do Not Handle or Move the Battery – It may explode or release toxic gases.

Battery Disposal

To safely dispose of lithium-ion batteries, do not place them in general waste or incinerate them, as they pose a fire and environmental hazard. Instead, take used or damaged batteries to a certified recycling centre or an approved battery disposal facility. Always follow local regulations and guidelines for hazardous waste disposal. Before transport, cover the battery terminals with non-conductive tape to prevent short circuits. Proper disposal helps prevent pollution and allows valuable materials to be recovered and reused.

6. Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.

TOOL SPECIFIC SAFETY WARNINGS

Wear ear protectors. Exposure to noise can cause hearing loss.

Wear eye protection. Wear goggles to prevent eyes from exposure to flying particles.

Wear dust mask. Take protective measures against inhalation of dust. Some materials can contain toxic materials. Also work with dust/ chip extraction when connectable.

Additional Safety Rules for Jigsaws

- **Hold the power tool by insulated gripping surfaces when performing an operation where the cutting accessory may contact hidden wiring.** Contact with a live wire may make exposed metal parts of the power tool live and could give the operator an electric shock.
- **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the workpiece by hand or against your body leaves it unstable and may lead to loss of control
- **Keep hands away from the cutting area.** Never reach underneath the workpiece while the blade is moving.
- **Always keep hands and fingers clear of the saw blade and cutting line.**
- **Allow the blade to come to a complete stop before setting the tool down.**

- **Never remove cut material, wood chips or debris while the blade is moving.**

Blade Safety

- **Use only saw blades that are suitable for the material being cut and compatible with this tool.**
- **Inspect blades before use.** Do not use bent, cracked, damaged or excessively worn blades.
- **Ensure the blade is correctly installed and securely locked in the blade holder before use.**
- **Replace dull blades promptly.** Dull blades can cause excessive vibration, poor cutting performance and loss of control.
- **Do not touch the blade immediately after use.** The blade may become hot during operation and can cause burns.



Safe Operation

- › Kickback is a sudden reaction to a pinched, jammed or misaligned saw blade, causing an uncontrolled saw to lift up and out of the workpiece toward the operator
- › When the blade is pinched or jammed tightly by the kerf closing down, the blade stalls and the motor reaction drives the unit rapidly back toward the operator
- › If the blade becomes twisted or misaligned in the cut, the teeth at the back edge of the blade can dig into the top surface of the wood causing the blade to climb out of the kerf and jump back toward the operator.
- › Kickback is the result of saw misuse and/or incorrect operating procedures or conditions and

Dust and Material Hazards

- › Dust produced from certain materials may be hazardous to health. Always wear suitable respiratory protection when necessary.
- › Materials such as treated timber, MDF, painted surfaces and plastics may produce harmful dust or fumes when cut.
- › Ensure adequate ventilation in the working area.

Vibration and Control

- › Maintain a firm grip on the tool during operation.
- › Keep the blade sharp and the tool properly maintained to minimise vibration.
- › If excessive vibration occurs, stop work immediately and inspect the blade and tool for damage.

CHARGER SAFETY

WARNING!

Read all safety warnings, instructions and specifications provided with the charger. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. **Save all warnings and instructions for future reference.**

To reduce risk of injury, only charge JCB rechargeable batteries.

The charger and battery packs are specifically designed to work together. Other types of batteries may burst causing fire and personal injury.

Do not allow any liquid to get inside the charger. Electric shock may result.

Do not expose the charger to rain or snow.

Under certain conditions with the charger plugged into the power supply, the exposed charging contacts inside the charger can be shorted by foreign materials. Foreign materials of a conductive nature such as, but not limited to, steel, wool, aluminium foil or any buildup of metallic particles should be kept away from charger cavities.

Always unplug the charger from the power supply when there is no battery in the cavity.


Unplug the charger from the power supply before attempting to clean.

Do not operate the charger with a damaged cord or plug. Have them replaced immediately.

The charger is designed to operate on standard 230-240V AC household electrical power. Do not attempt to use it on any other voltage.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

COMPONENT LIST

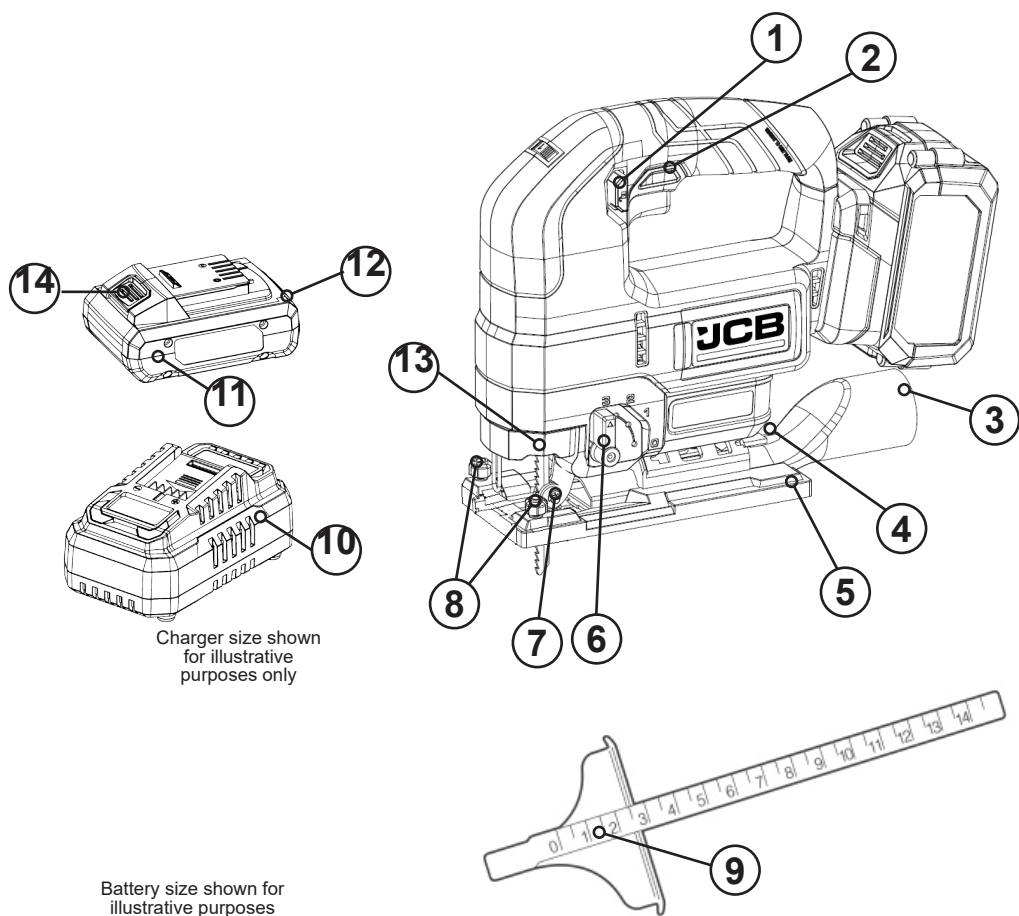

Charger size shown
for illustrative
purposes only

Battery size shown for
illustrative purposes
only

- | | |
|------------------------------------|---|
| 1. SAFETY INTERLOCK SWITCH | 8. FASTENING SCREWS FOR THE PARALLEL STOP |
| 2. ON/OFF SWITCH | 9. PARALLEL STOP |
| 3. DUST NOZZLE | 10. CHARGER* |
| 4. BASE PLATE LOCKING LEVER | 11. BATTERY PACK* - PLEASE REFER |
| 5. BASE PLATE | 12. TO TABLE ON PAGE 11 FOR BATTERY |
| 6. PENDULUM STROKE ADJUSTING LEVER | 13. INFORMATION |
| 7. BLADE GUIDE ROLLER | 14. BATTERY TEST BUTTON AND CHARGE INDICATOR* |
| | 15. BLADE FIXTURE/ARBOR |
| | 16. BATTERY RELEASE BUTTON |

*If applicable/NOT INCLUDED

TOOL TECHNICAL DATA

Power		18V DC (From Attached Battery)
No Load Speed		0 - 2500 rpm
Stroke Length		26 mm
Saw Positions		4
Saw Angles		0° / 15° / 30° / 45°
Saw Blade Fixture		T-Shank
Cutting Capacity	Wood	90 mm
	Steel	10 mm
Product Weight (Body only, w/o battery)		1.8 kg

LITHIUM ION BATTERY TECHNICAL DATA

Battery Code	Battery Size	Voltage	Battery Capacity	Charge Time (18FC-45 Fast Charger)	Charge Time (18-FC9 Super Fast Charger)	Charge Time (18-DC45 Dual Fast Charger)
18LI-2	Small	18V	2.0Ah	45 mins	45 mins	45 mins
18LI-4HC	Small	18V	4.0Ah	65 mins	45 mins	65 mins
18LI-5	Large	18V	5.0Ah	75 mins	45 mins	75 mins
Times given as a guide only. Battery charge and discharge times dependent on age, usage and condition.						

CHARGER TECHNICAL DATA

Charger Type	Input Data	Output Data
18FC-45 Fast Charger	AC 220-240V, 50-60Hz, 120W	18V d.c. 4.5A
18FC-9 Super Fast Charger	AC 220-240V, 50-60Hz, 185W	20.5V d.c. 9.0A
18DC-45 Dual Fast Charger	AC 220-240V, 50-60Hz, 260W	18V d.c. 2 x 4.5A USB-A & USB-C =5V d.c. 2.4A

NOISE INFORMATION

Noise emission values determined according to EN 62841 and EN 62841-2-1.

A-Weighted Sound Pressure (L_{pA})	76.1 dB(A)
A-Weighted Sound Power (L_{wA})	87.1 dB(A)
K_{pA} & K_{wA}	3 dB(A)
Wear ear protection when sound pressure is over 80 dB(A)	



VIBRATION INFORMATION

Vibration total values (triax vector sum) determined according to EN 62841-1 and EN 62841-2-11

Sawing into Wood	Vibration Emission Value (a_h)	6.2 ms ⁻²
	Uncertainty (K)	1.5 ms ⁻²
Sawing into Metal	Vibration Emission Value (a_h)	6.3 ms ⁻²
	Uncertainty (K)	1.5 ms ⁻²

WARNING!

The vibration emission value of the power tool is tested under EN 62841-1 and EN 62841-2-11, and can vary during operation depending on the following usage conditions:

How the tool is used and the materials being cut or drilled.

The tool being in good condition and well maintained.

Using the correct accessory for the tool and ensuring it is sharp and in good condition.

The tightness of the grip on the handles and if any anti-vibration accessories are used.

The tool being used as intended by its design and these instructions.

The declared vibration total value may also be used in a preliminary assessment of exposure.

THIS TOOL MAY CAUSE HAND-ARM VIBRATION SYNDROME IF USAGE IS NOT ADEQUATELY MANAGED.

WARNING!

To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle. These include times when the tool is switched off and when it is running idle but not actually doing work. This may significantly reduce the total exposure level over the working period, helping to minimize your vibration exposure risk.

ALWAYS use sharp chisels, drills and blades.

Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti-vibration accessories.

Avoid using tools in temperatures of 10°C or less.

Plan your work schedule to spread any high vibration tool use across a number of days.

OPERATING INSTRUCTIONS

Intended Use

This jig saw is intended for cutting and sawing of wood, metal, plastic and other similar materials.

The tool must not be modified or used for any other purposes than the ones described in these instructions.

Battery

NOTE

Make sure the power switch is not pressed in when inserting or replacing the battery. Use with JCB batteries only: JCB-18LI-2, JCB-18LI-HC, JCB-18LI-5.

Do not force the battery when connecting it, use moderate pressure.

An incorrectly connected battery can damage the battery terminals or the battery socket on the tool.

Use the button on the battery to check the charging status; 4 red LEDs indicate fully charged, where 1 indicates low battery status.

Charging The Battery



WARNING!

After charging for the first time, ensure the battery is completely discharged before placing on charge again. Repeat this charging and discharging cycle 4 to 5 times to ensure battery is correctly conditioned.

Place the battery charger on a level and stable surface. Plug the charger into a suitable power point.

Connect the battery to the charger so that it clicks into place.

Refer to the Battery Charge Level table below for battery charger status as indicated by LED lights.

When the battery pack is fully charged, unplug the charger and remove the battery pack from the charger.

Battery Charge Level

Red LED	Green LED	Battery Charge Status
		Charger is connected to mains power
		Connected battery is charging
		Connected battery is fully charged
		Connected battery has a charging fault
		Charger is outside correct operating temperature range (<0°C / >40°C)

If the LEDs on the charger do not come on when charging:

Check that the charger's plug is properly plugged into the mains outlet and that the charger is switched on

Check that the battery is correctly inserted in the charger

Connecting the battery

Connect the battery to the battery socket on the tool so that it clicks into place.

Removing the battery

Press the battery release button and remove the battery from the tool.

Inserting the Saw Blade

WARNING!

Prior to any assembly and adjustment always unplug the tool/remove the battery pack as appropriate.

NOTE

Only use T-shank jig saw blades.

Position the blade on the guide roller beneath the blade arbor. Turn the arbor assembly, the blade should now sit within the arbor.

Ensure the blade is pushed completely into the arbor, and release.

Ensure the blade is seated correctly in the blade guide roller.

Check the blade is held firmly, by gently pulling it.

WARNING!

After a cut the saw blade will be very hot. Be careful when removing the saw blade. Wear appropriate safety gloves.

Power Switch

WARNING!

Before engaging the ON/OFF switch, check that the saw blade is properly fitted.

To power on the jig saw, press and hold the safety interlock switch in and then press the ON/OFF switch on.

When you release the ON/ OFF switch the tool turns off.

Startup

Before switching on the jig saw the front of the base plate must lie flat on the work piece.

Always hold the jig saw firmly with both hands. Make sure that the saw blade is not in contact with the work piece before the jig saw is turned on.

Allow the blade to come to a full stop before removing it from the cut.

NOTE

Do not let the jig saw run in continuous operation at the lowest speed. The motor can overheat.

Mitre Cutting

WARNING!

When adjusting the base plate, make sure the forward and the rear locating teeth in the jig saw body are aligned and fully engaged in the corresponding slots in the base plate before closing the locking lever.

WARNING!

Only set the mitre angle when the tool is stopped and the blade has stopped moving. Otherwise the tool can be damaged.

Open the base plate locking lever.

Tilt the base plate to the required position.

Close the base plate locking lever to lock the base plate into position.

Use of hex key on base plate adjustment

NOTE

A hex key is provided in the package to use for base plate tightening.

When adjusting the base plate, if required, use a hex key to tighten the bolt underneath the base plate.

Adjusting the Pendulum Stroke

Pendulum stroke is adjusted using the stroke adjustment lever. The pendulum stroke moves the saw blade in a horizontal, pendulum motion.

At level 0, the jig saw works in linear stroke and at levels 1-3 in pendulum stroke. At level 3 the pendulum motion is at its greatest.

To facilitate the removal of swarf from the blade during cutting, the saw is pushed backwards in the downward stroke. This increases the cutting speed in the longitudinal sections and less force is therefore needed when cutting.

Using pendulum stroke increases the service life of blades.

Correctly adjusting the pendulum stroke improves the operation of the jig saw. The blade is protected, the ejection of swarf is improved and frictional heat is greatly reduced.

NOTE

The pendulum stroke can be adjusted while the jig saw is running.

Lever Position: 0 - Linear Stroke

For cutting soft steel, stainless steel, plastic and HDF boards.

For precise sawing of all materials for straight and curved cuts.

For clean cuts into wood and plywood.

For sawing of splinter-susceptible materials.

Lever Position 1 - Small Pendulum

For cutting soft steel, aluminium and hardwood.

Lever Position 2 - Medium Pendulum

For cutting wood and plywood.

Lever Position 3 - Large Pendulum

For fast cutting wood and plywood.

NOTE

When using pendulum strokes, cutting edges may splinter more than when working with linear strokes. Brittle coatings on soft substrates - e.g. laminated board are particularly prone to this occurring.

Dust Collection

The jig saw can produce a lot of sawdust. By connecting the machine to a vacuum cleaner, a clean and dust free operation is possible.

NOTE

Dust extraction is not possible for mitre cuts.

Slide the nozzle all the way into the opening until the snap-in nose visibly and audibly locks into place.

Connect the dust nozzle with a vacuum cleaner or dust extractor.

NOTE

When sawing wood it is best to use an additional dust protection mask as wood dust is a health hazard.

Parallel Stop

To cut parallel to a wood edge you can use the enclosed parallel stop. In order to fix the parallel stop:

Loosen the fastening screws slightly.

Using the centimetre scale on the parallel stop, you can adjust the distance between the stop bar and the saw blade.

Secure parallel stop by tightening the fastening screws in the desired position.

When not using the parallel stop, tighten the fastening screws securely. Otherwise the screws can be unscrewed and fall off due to the vibration of sawing.

Maintenance

WARNING!

Switch off the power tool and disconnect the power (remove battery/unplug) before cleaning and maintenance. This helps avoid the risk of electric shocks and accidental starting.

Wipe the power tool with a dry or damp cloth. **Do not use a wet cloth. Do not use detergents that contain solvents or corrosive, abrasive additives.** This risks damaging the surfaces of the power tool.

Clear the power tool vents and the accessory mount of dust and dirt after each use. **Do not clean ventilation holes by inserting sharp objects in them, such as screwdrivers and other similar objects.**

Stubborn contamination in areas hard to access can be removed with compressed air (max. 3 bar).

Regularly check all fasteners, screws and bolts to make sure that they are tight. Tighten any loose screws immediately or serious injury could occur.

WARNING!

Never open the power tool. The power tool has no internal parts that the user can service or repair. Never try to repair the power tool yourself. Take to an authorised service centre.

Transport and Storage

If the power tool will remain unused for any length of time, it should be stored in the original packaging.

Store the power tool and battery in a dry, frost-free, well ventilated place.

Keep all tools out of the reach of children.

Always switch off the power tool and disconnect it from the power supply (remove the battery/unplug the power cord) before transport.

Always carry the power tool using the purpose-designed handle.

Ensure that the power tool is not at risk of tipping over or exposed to excessive vibration and shocks during transport, especially if the power tool will be transported by car or other vehicle.

NOTE

Operating temperature: 0-40 °C
Storage temperature: 20-60 °C

WARRANTY STATEMENT

Proof of purchase will be required before you make a warranty claim. Full warranty terms and conditions are available from your local distributor, they can be found on the JCB Tools website:

www.jcb-tools.com

**FOR ANY MACHINE SOLD OUTSIDE THE UK, PLEASE CONTACT THE
VENDOR FROM WHOM YOU PURCHASED THE MACHINE, AND/OR YOUR
LOCAL JCB TOOLS DISTRIBUTOR**

RETURNING YOUR PRODUCT

If you are returning your product, please contact the dealer for their returns policy.



DECLARATION OF CONFORMITY				
1.	PRODUCT(S) COVERED BY THIS DECLARATION:	Product: Product Code No.	JCB Professional 18V Jigsaw - Black Edition JCB-18BPJS-DG	
		Factory Reference No.	BLCQL-372	
2.	IDENTIFICATION DETAILS OF MANUFACTURER:	Name:	Genpower Ltd.	
		Address:	Isaac Way Pembroke Dock, SA72 4RW UK	
	AUTHORISED REPRESENTATIVE:	Name:	CW Brands Pty Ltd.	
		Address:	21 Ballantyne Road Kewdale WA 6105 Australia	
3.	THIS DECLARATION OF CONFORMITY IS ISSUED UNDER THE SOLE RESPONSIBILITY OF THE MANUFACTURER			
4.	OBJECT OF THE DECLARATION:	Product:	18V Jigsaw	
		Function:	Cutting and sawing	
5i.	THE OBJECT OF THE DECLARATION DESCRIBED IN POINT 4 IS IN CONFORMITY WITH THE RELEVANT UNION HARMONISATION LEGISLATION:	2014/35/EU	The Low Voltage Directive	
		2014/30/EU	The Electromagnetic Compatibility Directive	
		2006/42/EC	The Machinery Directive	
		2023/1542/EU	The Battery Regulation	
		2019/1021/EU	Persistent Organic Pollutants Regulation	
		1907/2006/EC	Registration, Evaluation, Authorisation, and Restriction of Chemicals	
		2011/65/EU	The Restriction of Hazardous Substances Directive	
6.	REFERENCES TO THE RELEVANT HARMONISED SAFETY STANDARDS USED OR REFERENCES TO THE OTHER TECHNICAL SPECIFICATIONS IN RELATION TO WHICH CONFORMITY IS DECLARED:	EN 62841-1:2015+A11:2022 EN 62841-2-11:2016+A1:2020 +A11:2024 IEC 62133-2:2017+A1:2021 UN 38.3: ST/SG/AC.10/11/Rev.7 EN ISO 12100:2010 EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN 60335-1:2023+A11:2023 EN 60335-2-29:2021+A11:2024 EN IEC 61000-3-2:2019 + A2:2024 EN 61000-3-3:2013+A2:2021	Electric motor-operated hand-held tools, transportable tools and lawn and garden machinery. Safety. General requirements Electric motor-operated hand-held tools, transportable tools and lawn and garden machinery. Safety. Particular requirements for hand-held reciprocating saws Secondary cells and batteries containing alkaline or other non-acid electrolytes. Safety requirements for portable sealed secondary cells, and for batteries made from them, for use in portable applications - Lithium systems Transport of Dangerous Goods, Manual of Tests and Criteria Safety of machinery - General principles for design - Risk assessment and risk reduction Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Emission Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Immunity Household and similar electrical appliances. Safety - General requirements Household and similar electrical appliances. Safety - Particular requirements for battery chargers Electromagnetic compatibility (EMC) - Limits. Limits for harmonic current emissions (equipment input current < 16 A per phase) Electromagnetic compatibility (EMC) - Limits. Limitation of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems, for equipment with rated current < 16 A per phase and not subject to conditional connection	
7.	ADDITIONAL INFORMATION. THE TECHNICAL DOCUMENTATION FOR THE MACHINERY IS AVAILABLE FROM:	Name:	CW Brands Pty Ltd.	
		Address:	21 Ballantyne Road Kewdale WA 6105	
		Country:	Australia	
SIGNED FOR AND ON BEHALF OF:				
PLACE OF ISSUE:		Genpower Limited		
DATE OF ISSUE:		WALES, UK		
NAME:		20/04/2026		
FUNCTION:		ROLAND J. LLEWELLYN		
SIGNATURE:		MANAGING DIRECTOR		
		