


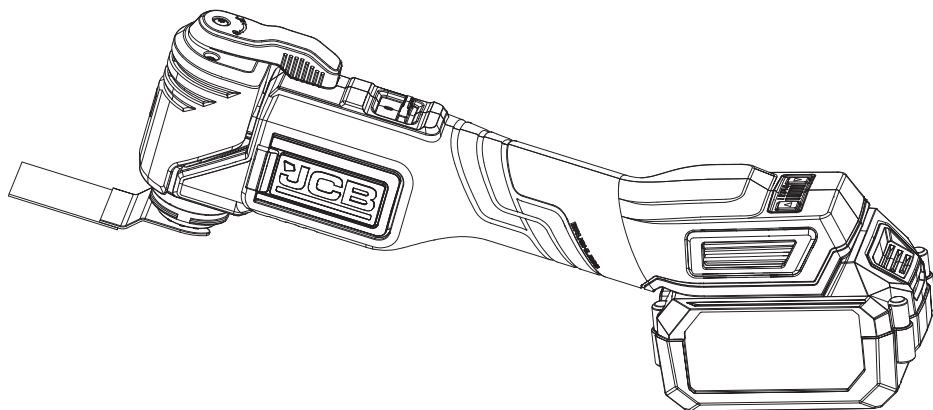

JCB-18BMT-32

Original Instructions

GENERAL WARNINGS & DISPOSAL



To reduce the risk of injury, the user must read the instruction manual.



This symbol is used throughout this manual to warn the user about potential risks. Please read & understand these sections before using the device.



Personal Protective Equipment (P.P.E.), such as ear defenders, eye protection, safety gloves and a dust mask, must be worn during the operation of the device.



The device must not be exposed to rain or immersed in water.



Do not allow any part of the device to come into contact with flames, or to catch fire.



Do not expose battery pack or tool to fire or excessive temperatures.



Do not dispose of batteries in household waste. Return exhausted batteries to a local collection or recycling point.



This product has been marked with a symbol relating to removing electric and electronic waste. The product should not be discarded with household waste but must be returned to a collection system which conforms to the EU Directive 2012/19/EU or the UK Waste Electrical and Electronic Equipment Regulations 2013. It will then be recycled or dismantled in order to reduce the impact on the environment. Electric and electronic equipment can be hazardous for the environment and for human health since they contain hazardous substances.

The month and year of manufacture can be found within the product serial number e.g. MMYYPXXXXXXX. Where production month (MM) and production year (YY) are included.
JCB-18BMT-32 Designation of the tool: 18 - 18Vdc, MT - Multi-Tool

Contents

GENERAL POWER TOOL SAFETY WARNINGS	4
1. Work area safety	4
2. Electrical safety	4
3. Personal safety	4
4. Power tool use and care	5
5. Battery tool use and care	5
6. Service	6
TOOL SPECIFIC SAFETY WARNINGS	7-8
CHARGER SAFETY	9
COMPONENT LIST	10
TOOL TECHNICAL DATA	11
BATTERY TECHNICAL DATA	11
CHARGER TECHNICAL DATA	11
NOISE INFORMATION	11
VIBRATION INFORMATION	12
OPERATING INSTRUCTIONS	13
Intended Use	13
Battery Use	13
Accessory Information	14-15
Maintenance & Storage	16
Warranty Info	17
Declaration of Conformity	18



GENERAL POWER TOOL SAFETY WARNINGS

WARNING!

Read all safety warnings, instructions and specifications provided with the charger.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains operated (corded) power tool or battery operated (cordless) power tool.

1. Work area safety

Keep work area clean and well lit.

Cluttered or dark areas invite accidents.

Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2. Electrical safety

Power tool plugs must match the outlet.

Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.

When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

3. Personal safety

Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

Use personal protective equipment.

Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.

Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.

Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

4. Power tool use and care

Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.

Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.

Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.

Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

5. Battery tool use and care

When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.



Do not use a battery pack or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, an explosion or risk of injury.

Do not expose a battery pack or tool to fire or excessive temperature. Exposure to fire or temperature above 130 °C may cause explosion.

Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

In Case of Fire or Thermal Runaway, follow these steps:

1. If the battery catches fire or shows signs of thermal runaway (e.g. swelling, smoke, hissing, or intense heat):
2. Evacuate the Area Immediately – Ensure personal safety first. Move away from the battery.
3. Do Not Attempt to Extinguish with Water – Use a Class D fire extinguisher or dry sand if available.
5. Call Emergency Services – Contact your local fire department and inform them it is a lithium battery fire.
6. Do Not Handle or Move the Battery – It may explode or release toxic gases.

Battery Disposal

To safely dispose of lithium-ion batteries, do not place them in general waste or incinerate them, as they pose a fire and environmental hazard. Instead, take used or damaged batteries to a certified recycling centre or an approved battery disposal facility. Always follow local regulations and guidelines for hazardous waste disposal. Before transport, cover the battery terminals with non-conductive tape to prevent short circuits. Proper disposal helps prevent pollution and allows valuable materials to be recovered and reused.

6. Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.



TOOL SPECIFIC SAFETY WARNINGS

Wear ear protectors. Exposure to noise can cause hearing loss.

Wear eye protection. Wear goggles to prevent eyes from exposure to flying particles.

Wear a dust mask. Take protective measures against inhalation of dust. Some materials can contain toxic materials. Also work with dust/ chip extraction when connectable.

Wear gloves when operating the power tool or changing accessories. Accessible metal parts on the tools and bits may get extremely hot during operation. Small bits of broken material may damage bare hands.

Safety Warnings Common for Oscillating/Vibrating Tools

Always hold the tool by its insulated gripping surfaces when performing any operation where the blade or accessory may contact hidden wiring. Contact with a “live” wire could make exposed metal parts of the tool “live” and cause electric shock.

Use only accessories specifically designed and recommended by the tool manufacturer for use with your multi-tool. Accessories not intended for this tool may not fit securely or may cause unsafe operation.

Ensure the accessory is firmly attached before starting the tool. A loose accessory can shift or detach during use, causing loss of control or injury.

Do not exceed the accessory’s recommended speed or application limits. Even though oscillating tools do not spin like grinders, over-stressing accessories can cause breakage or accelerated wear.

Inspect the accessory before each use for cracks, wear, bending, or loose components. Replace damaged accessories immediately.

- Cutting blades: check for missing teeth, cracks, or warping.
- Sanding pads: check for tears, loose backing, or excessive wear.
- Scrapers and grout blades: check for cracks or deformation.

After installing an accessory, keep hands, clothing, and bystanders clear of the cutting area. Run the tool for a few seconds at maximum speed to ensure smooth operation before applying it to the workpiece.

Tools Blades/Bits heat rapidly (especially when blunt). Ensure after operating you never touch the blade to skin or combustible materials.

TOOL SPECIFIC SAFETY WARNINGS

Binding, Kickback and Related Warnings:

Although oscillating tools typically produce less kickback than rotating tools, binding can still cause sudden movement of the accessory or tool.

Binding occurs when the accessory gets pinched, jammed, or stuck in the workpiece. For example:

- A cutting blade can snag in dense material or nails, causing the tool to jerk suddenly.
- A sanding pad can catch on a protruding edge and cause the tool to twist in your hand.

To reduce the risk of binding or loss of control:

- Maintain a firm, balanced grip and keep both hands on the tool whenever possible.
- Let the accessory do the work—do not force it into the material.
- Avoid twisting or prying with the accessory while it is oscillating.
- Be especially careful when starting a cut or when finishing through the last part of a material, as snagging is more likely.

Case of Fire or Thermal Runaway, follow these steps:

1. If the battery catches fire or shows signs of thermal runaway (e.g. swelling, smoke, hissing, or intense heat):
2. Evacuate the Area Immediately – Ensure personal safety first. Move away from the battery.
3. Do Not Attempt to Extinguish with Water – Use a Class D fire extinguisher or dry sand if available.
5. Call Emergency Services – Contact your local fire department and inform them it is a lithium battery fire.
6. Do Not Handle or Move the Battery – It may explode or release toxic gases.

CHARGER SAFETY

WARNING!

Read all safety warnings, instructions and specifications provided with the charger. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. **Save all warnings and instructions for future reference.**

To reduce risk of injury, only charge JCB rechargeable batteries.

The charger and battery packs are specifically designed to work together. Other types of batteries may burst causing fire and personal injury.

Do not allow any liquid to get inside the charger. Electric shock may result.

Do not expose the charger to rain or snow.

Under certain conditions with the charger plugged into the power supply, the exposed charging contacts inside the charger can be shorted by foreign materials. Foreign materials of a conductive nature such as, but not limited to, steel, wool, aluminium foil or any buildup of metallic particles should be kept away from charger cavities.

Always unplug the charger from the power supply when there is no battery in the cavity.

Unplug the charger from the power supply before attempting to clean.




Do not operate the charger with a damaged cord or plug. Have them replaced immediately.

JCB battery chargers are designed to operate on 230-240V AC input voltage (Note: the dual charger can additionally operate on 100-240 AC input voltage). Do not attempt to use them on any other supply voltage.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



COMPONENT LIST

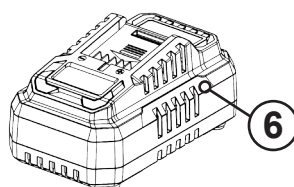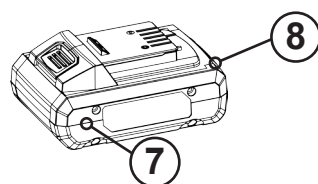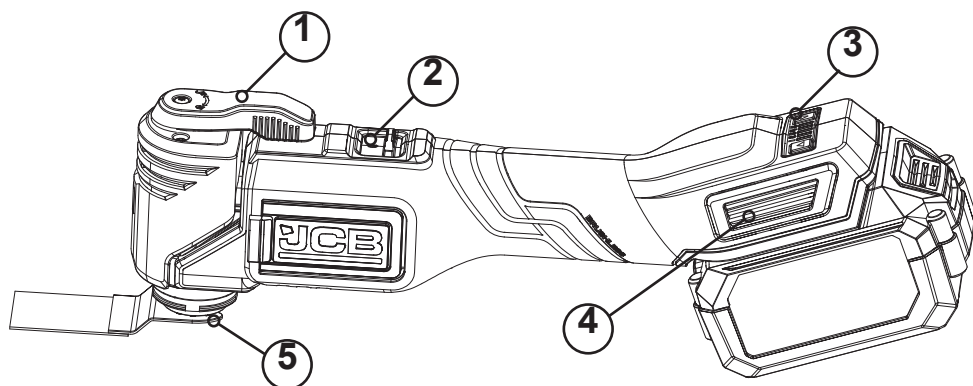

Charger size shown
for illustrative
purposes only

1. ACCESSORY LOCK
2. ON/ OFF SWITCH
3. SPEED CONTROL
4. VENTILATION OPENINGS
5. ACCESSORY ADAPTOR
6. CHARGER*
7. BATTERY PACK* - PLEASE REFER TO TABLE
ON PAGE 11 FOR BATTERY INFORMATION
8. BATTERY TEST BUTTON AND
CHARGE INDICATOR*

*If applicable

TECHNICAL DATA

Product weight (body only)	1.1kg
Power	18V DC (From Attached Battery)
No Load Speed	5000-15000 rpm
Oscillation	3 Degrees

LITHIUM ION BATTERY TECHNICAL DATA

Battery Code	Battery Size	Voltage	Battery Capacity	Charge Time (18FC-45 Fast Charger)	Charge Time (18-FC9 Super Fast Charger)	Charge Time (18-DC45 Dual Fast Charger)
18LI-2	Small	18V	2.0Ah	45 mins	45 mins	45 mins
18LI-4HC	Small	18V	4.0Ah	65 mins	45 mins	65 mins
18LI-5	Large	18V	5.0Ah	75 mins	45 mins	75 mins

Times given as a guide only. Battery charge and discharge times dependant on age, usage and condition.

CHARGER TECHNICAL DATA

Charger Type	Input Data	Output Data
18FC-45 Fast Charger	AC 220-240V, 50-60Hz, 120W	18V d.c. 4.5A
18FC-9 Super Fast Charger	AC 220-240V, 50-60Hz, 185W	20.5V d.c. 9.0A
18DC-45 Dual Fast Charger	AC 220-240V, 50-60Hz, 260W	18V d.c. 2 x 4.5A USB-A & USB-C =5V d.c. 2.4A

NOISE INFORMATION

Noise emission values determined according to EN 62841 and EN 62841-2-1.

A-Weighted Sound Pressure (L_{pA})	76.1 dB(A)
A-Weighted Sound Power (L_{wA})	87.1 dB(A)
K_{pA} & K_{wA}	3 dB(A)
Wear ear protection when sound pressure is over 80 dB(A)	



VIBRATION INFORMATION

Vibration total values (triax vector sum) determined according to EN 62841-1 and EN 62841-2-11

No Load	Vibration Emission Value (a_h)	9.3 ms ⁻²
	Uncertainty (K)	1.5 ms ⁻²
Sanding	Vibration Emission Value (a_h)	3.9 ms ⁻²
	Uncertainty (K)	1.5 ms ⁻²

WARNING!

The vibration emission value of the power tool is tested under EN 62841-1 and EN 62841-2-11, and can vary during operation depending on the following usage conditions:

How the tool is used and the materials being cut or drilled.

The tool being in good condition and well maintained.

Using the correct accessory for the tool and ensuring it is sharp and in good condition.

The tightness of the grip on the handles and if any anti-vibration accessories are used.

The tool being used as intended by its design and these instructions.

The declared vibration total value may also be used in a preliminary assessment of exposure.

THIS TOOL MAY CAUSE HAND-ARM VIBRATION SYNDROME IF USAGE IS NOT ADEQUATELY MANAGED.

WARNING!

To be accurate, an estimation of exposure level in the actual conditions of use should also take account of all parts of the operating cycle. These include times when the tool is switched off and when it is running idle but not actually doing work. This may significantly reduce the total exposure level over the working period, helping to minimize your vibration exposure risk.

ALWAYS use sharp and undamaged bits, chisels, drills and blades.

Maintain this tool in accordance with these instructions and keep well lubricated (where appropriate).

If the tool is to be used regularly then invest in anti-vibration accessories.

Avoid using tools in temperatures of 10°C or less.

Plan your work schedule to spread any high vibration tool use across a number of days.

OPERATING INSTRUCTIONS

Intended Use

This multi-function tool is intended for a variety of different DIY jobs, such as sanding, sawing and cutting. The tool must not be modified or used for any other purposes than the ones described in these instructions.

Battery

NOTE

Make sure the power switch is not pressed in when inserting or replacing the battery. Use with JCB batteries only: 21-20LI, 21-30-LI, 21-40LI and 21-50LI.

Do not force the battery when connecting it, use moderate pressure.

An incorrectly connected battery can damage the battery terminals or the battery socket on the tool.

Use the button on the battery to check the charging status; 4 red LEDs indicates fully charged, where 1 indicates low battery status.

Charging The Battery



WARNING!

After charging for the first time, ensure the battery is completely discharged before placing on charge again. Repeat this charging and discharging cycle 4 to 5 times to ensure battery is correctly conditioned.

Place the battery charger on a level and stable surface. Plug the charger into a suitable power point.

Connect the battery to the charger so that it clicks into place.

Refer to the Battery Charge Level table below for battery charger status as indicated by LED lights.

When the battery pack is fully charged, unplug the charger and remove the battery pack.

Battery Charge Level

Red LED	Green LED	Battery Charge Status
		Charger is connected to mains power
		Connected battery is charging
		Connected battery is fully charged
		Connected battery has a charging fault
		Charger is outside correct operating temperature range (<0°C / >40°C)

If the LEDs on the charger do not come on when charging:

Check that the charger's mains plug is properly plugged into the power point and that the charger is switched on

Check that the battery is correctly inserted in the charger

Connecting the battery

Connect the battery to the battery socket on the tool so that it clicks into place.

Removing the battery

Press the battery release button and remove the battery from the tool.

Replacing Accessories

Place the tool on a stable surface, for example a work bench.

Turn the accessory lock release the accessory and the accessory adaptor.

Select the appropriate accessory for the job. Align the mounting holes on the accessory over the pins on the multi-function head.

Hold the accessory adaptor and accessory against the multi-function head. Turn back the accessory lock .

Selecting Sandpaper

NOTE

Work with moderate pressure on the tool when sanding, otherwise it is easy to mark the workpiece.

There is a number on the back of the sandpaper. The higher the number, the smaller the grit, and the lower the number, the larger the grit.

Large grit remove more material and are suitable for removing paint or rough sanding of raw surfaces with burrs and nicks etc. The sanded surface will be relatively rough.

Sandpaper with medium grit is often suitable for sanding more simple wooden structures and carpentry.

Sandpaper with fine grit is suitable for sanding untreated wood when a soft and smooth surface is required.

Sandpaper with extra fine grit is suitable for fine sanding and polishing, or for sanding between coats of varnish.

Fitting and Replacing Sandpaper

Align the sandpaper to the Velcro fastener on the sanding pad, and press in place.

When replacing or adjusting the position of the sandpaper, pull the sandpaper carefully off from one of the corners.

Sanding



WARNING!

Sanding dust hazardous to health is produced from both wood and metal. Wear a dust filter mask and safety glasses.

NOTE

Always test sand a sample piece first.

Hold the sanding pad just over the workpiece, without the sandpaper touching the workpiece. Start the multi-tool and move the power switch to position 1, and wait until the tool has reached full power.

Bring the tool down flush with the workpiece, so that all the sanding surface is in contact with the workpiece.

Do not overload the tool. The tool does the job better and safer when used at the rate for which it was designed.

Do not angle the tool to sand with only one edge as this can damage the sanding pad prevent the sandpaper fastening properly.

Make use of the corners and the triangular shape of the sanding pad to sand places that are difficult to reach.

Sawing

WARNING!

Hold the multi-tool by the insulated grips when working in areas where the accessory can come into contact with concealed electrical cables. Contact with a live cable will cause the metal parts on the tool to also become live – risk of electric shock.

NOTE

Check before sawing that the saw blade is straight and undamaged, and that the planned cut is free from nails and screws etc.

Secure the workpiece with a clamp, clips or vice.

Hold the multi-tool so that the saw blade is not touching the workpiece. Start the multi-tool and move the power switch to position 1, and wait until the tool has reached full power.

Scraper

Hold the multi-tool so that the scraper is not touching the workpiece. Start the multi-tool and move the power switch to position 1, and wait until the tool has reached full power.

Move the scraper at a slight angle to the workpiece.

Do not overload the tool. Work by applying a light pressure on the scraper. Excessive pressure can lead to nicks and marks in the workpiece, or overload the multi-tool.

Speed Selection

Adjust the number on the Speed control dial to suite your application. Higher the number higher the speed of oscillation. High speeds are good for depth cuts and bulk sanding, whereas low speed are better for light/precision sanding.

Turning ON/OFF

Move the ON/OFF switch forward to turn the machine on. Pull the switch back when you need to power down the tool. Allow all oscillation to stop before setting down.



Maintenance

WARNING!

Switch off the power tool and disconnect the power (remove battery/unplug) before cleaning and maintenance. This helps avoid the risk of electric shocks and accidental starting.

Wipe the tool with a dry or damp cloth.

Do not use a wet cloth. Do not use detergent that contains solvent or corrosive, abrasive additives.

This risks damaging the surfaces of the tool.

Clear the tool vents and the accessory mount of dust and dirt after each use.

Do not clean ventilation holes by inserting sharp objects in them, such as screwdrivers and other similar objects.

Stubborn contamination in areas hard to access can be removed with compressed air (max 3. bar).

Regularly check all fasteners, screws and bolts to make sure that they are tight. Tighten any loose screws immediately or serious injury could occur.

WARNING!

Never open the power tool. The power tool has no internal parts that the user can service or repair. Never try to repair the power tool yourself. Take to an authorised service centre.

Transport and Storage

If the power tool will remain unused for any length of time, it should be stored in the original packaging.

Store the power tool and battery in a dry, frost-free, well ventilated place.

Keep all tools out of the reach of children.

Always switch off the power tool and disconnect it from the power supply (remove the battery/unplug the power cord) before transport.

Always carry the power tool using the purpose-designed handle.

Ensure that the power tool is not at risk of tipping over or exposed to excessive vibration and shocks during transport, especially if the power tool will be transported by car or other vehicle.

NOTE

Operating temperature: 0-40 °C
Storage temperature: 20-60 °C

WARRANTY STATEMENT

Proof of purchase will be required before you make a warranty claim. Full warranty terms and conditions are available from your local distributor, they can be found on the JCB Tools website:

www.jcb-tools.com

**FOR ANY MACHINE SOLD OUTSIDE THE UK, PLEASE CONTACT THE
VENDOR FROM WHOM YOU PURCHASED THE MACHINE, AND/OR YOUR
LOCAL JCB TOOLS DISTRIBUTOR**

RETURNING YOUR PRODUCT

If you are returning your product, please contact the dealer for their returns policy.



DECLARATION OF CONFORMITY				
1.	PRODUCT(S) COVERED BY THIS DECLARATION:	Product: Product Code No. Factory Reference No.	JCB Professional 18V Multi Tool JCB-18BPMT-32 BLML-371	
2.	IDENTIFICATION DETAILS OF MANUFACTURER:	Name: Address: Country:	Genpower Ltd. Isaac Way Pembroke Dock, SA72 4RW UK	
	AUTHORISED REPRESENTATIVE:	Name: Address: Country:	CW Brands Pty Ltd. 21 Ballantyne Road Kewdale WA 6105 Australia	
3.	THIS DECLARATION OF CONFORMITY IS ISSUED UNDER THE SOLE RESPONSIBILITY OF THE MANUFACTURER			
4.	OBJECT OF THE DECLARATION:	Product: Function:	JCB 18V Multi Tool Cutting, trimming, sanding and scraping	
5i.	THE OBJECT OF THE DECLARATION DESCRIBED IN POINT 4 IS IN CONFORMITY WITH THE RELEVANT UNION HARMONISATION LEGISLATION:	2014/35/EU 2014/30/EU 2006/42/EC 2023/1542/EU 2019/1021/EU 1907/2006/EC 2011/65/EU	The Low Voltage Directive The Electromagnetic Compatibility Directive The Machinery Directive The Battery Regulation Persistent Organic Pollutants Regulation Registration, Evaluation, Authorisation, and Restriction of Chemicals The Restriction of Hazardous Substances Directive	
6.	REFERENCES TO THE RELEVANT HARMONISED SAFETY STANDARDS USED OR REFERENCES TO THE OTHER TECHNICAL SPECIFICATIONS IN RELATION TO WHICH CONFORMITY IS DECLARED:	EN 62841-1:2015+A11:2022 EN 62481-2-4:2014 EN ISO 12100:2010 IEC 62133-2:2017+A1:2021 UN 38.3: ST/SG/AC.10/11/Rev.7 EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN 60335-1:2023+A11:2023 EN 60335-2-29:2021+A11:2024 EN 62233:2008	Electric motor-operated hand-held tools, transportable tools and lawn and garden machinery. Safety. General requirements Electric motor-operated hand-held tools, transportable tools and lawn and garden machinery. Safety - Particular requirements for hand-held sanders and polishers other than disc type Safety of machinery. General principles for design. Risk assessment and risk reduction Secondary cells and batteries containing alkaline or other non-acid electrolytes. Safety requirements for portable sealed secondary cells, and for batteries made from them, for use in portable applications - Lithium systems Transport of Dangerous Goods, Manual of Tests and Criteria Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Emission Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Immunity. Household and similar electrical appliances. Safety - General requirements Household and similar electrical appliances. Safety - Particular requirements for battery chargers Measurement methods for electromagnetic fields of household appliances and similar apparatus with regard to human exposure	
7.	ADDITIONAL INFORMATION. THE TECHNICAL DOCUMENTATION FOR THE MACHINERY IS AVAILABLE FROM:	Name: Address: Country:	CW Brands Pty Ltd. 21 Ballantyne Road Kewdale WA 6105 Australia	
SIGNED FOR AND ON BEHALF OF: PLACE OF ISSUE: DATE OF ISSUE: NAME: FUNCTION:		Genpower Limited WALES, UK 20/04/2026 ROLAND J. LLEWELLYN MANAGING DIRECTOR 